



To make a **Voyager™ 1250g**

Single-Line Laser Scanner

not-so-beepy, scan
the appropriate
barcode(s) below:

Turn off the “beep” when
you plug the scanner into
your computer



BEPWRO.
Power Up Beeper Off -
Scanner

Beeper volume



BEPVL1.
Low



BEPVL2.
Medium

Beeper length



BEPBIP1.
Short Beep



BEPBIP0.
* Normal Beep

Beeper pitch



BEPFQ11600.
Low (1600 Hz)



BEPFQ12350.
* Medium (2350 Hz)



BEPFQ14200.
High (4200 Hz)